WAVE® connect kit

for iPod

Owner’s Guide
Bedienungsanleitung
Guía de usario
Notice d’utilisation
Manuale di istruzioni
Gebruiksaanwijzing
คู่มือผู้ใช้
사용자 안내서
用户指南
دليل المالك

IMPORTANT SAFETY INSTRUCTIONS

1. **Read these instructions –** for all components before using this product.
2. **Keep these instructions –** for future reference.
3. **Heed all warnings –** on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture –** Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with a dry cloth –** and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions –** To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet, that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or third prong are provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Unplug this apparatus during lightning storms or when unused for long periods of time –** to prevent damage to this product.

13. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped –** Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
14. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
15. **Do not let objects or liquids enter the product –** as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
16. **See product enclosure for safety-related markings.**
17. **Use proper power sources –** Plug the product into a proper power source, as described in the operating instructions or as marked on the product.

For further information on product regulatory compliance, please see the Wave® music system owner's guide.

SAFETY INFORMATION

Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

WARNING: *To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.*

WARNING: *Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.*

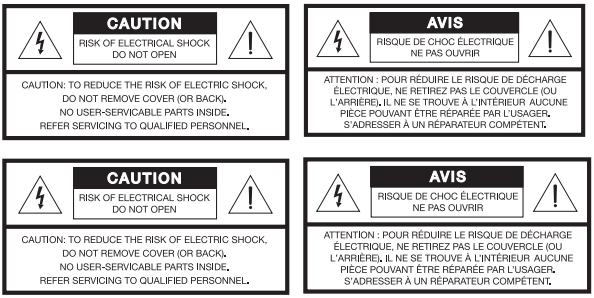
CAUTION
RISK OF ELECTRICAL SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED PERSONNEL.
AVIS
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR
ATTENTION : POUR RÉDUIRE LE RISQUE DE DÉCHARGE
ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE (OU
L'ARRIÈRE). IL NE SE TROUVE À L'INTÉRIEUR AUCUNE
PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'USAGER.
S'ADRESSER À UN RÉPARATEUR COMPÉTENT.
CAUTION
RISK OF ELECTRICAL SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED PERSONNEL.
AVIS
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR
ATTENTION : POUR RÉDUIRE LE RISQUE DE DÉCHARGE
ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE (OU
L'ARRIÈRE). IL NE SE TROUVE À L'INTÉRIEUR AUCUNE
PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'USAGER.
S'ADRESSER À UN RÉPARATEUR COMPÉTENT.

The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.

The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

Class B emissions

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations (Canada only).

WARNING: *Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100º C (212º F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.*

WARNING: *Danger of explosion if battery is incorrectly replaced. Replace only with Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032 3-volt lithium battery.*

WARNING: *Do not place any naked flame sources, such as lighted candles, on or near the apparatus.*

CAUTION: *Make no modification to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.*

CAUTION: *Bose recommends using a high-quality, safety agency-approved (i.e. UL, ETL) surge suppressor on all electronic equipment.*

Please dispose of used batteries properly, following any local regulations. Do not incinerate.

This product conforms to the EMC Directive 2004/108/EC and to the Low Voltage Directive 2006/95/EC. The complete Declaration of Conformity can be found at www.Bose.com/static/compliance/index.html

Note: *Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.*

Note: *The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.*

Note: *This product is intended to be used only with the power supply provided.*

CAUTION: *Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.*

Contents of your kit

Dock with adapter insert (iPod not included)

Remote control

RCA audio cable

Mini audio cable

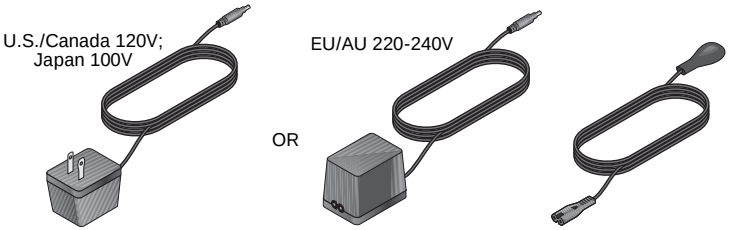

Power pack only (left) or power pack with line cord (right)

Compatibility

This kit is fully compatible with most iPod models.

For the Wave® connect kit to work as expected, your iPod must have the latest version of iPod software installed. If you need to upgrade, simply visit the Apple iPod web site and follow the instructions there.

USING YOUR WAVE® CONNECT KIT

Recommended placement

We recommend that you place the dock to the right of your Bose® Wave® music system so the iPod has minimal effect on FM or AM reception.

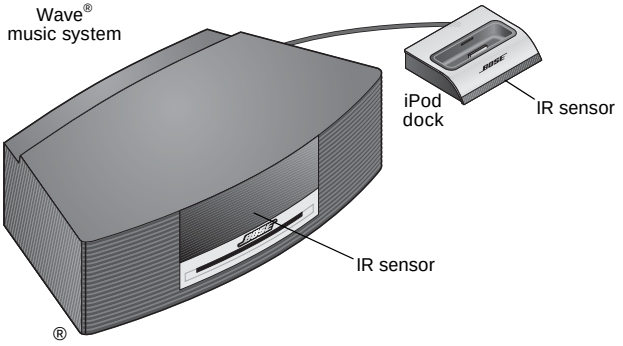

Be sure the IR sensor on the front of the iPod dock is visible and aligned with the Wave system IR sensor so both products respond to the remote.

Connecting the two products

Please be sure to make all other connections before plugging either Bose system (your Wave® music system or Wave® radio II) into a power outlet.

Use the supplied audio cable that is appropriate for your Bose system.

For a Wave® music system or Wave® radio II: Use the mini audio cable and connect AUX IN to AUDIO OUT on the dock.

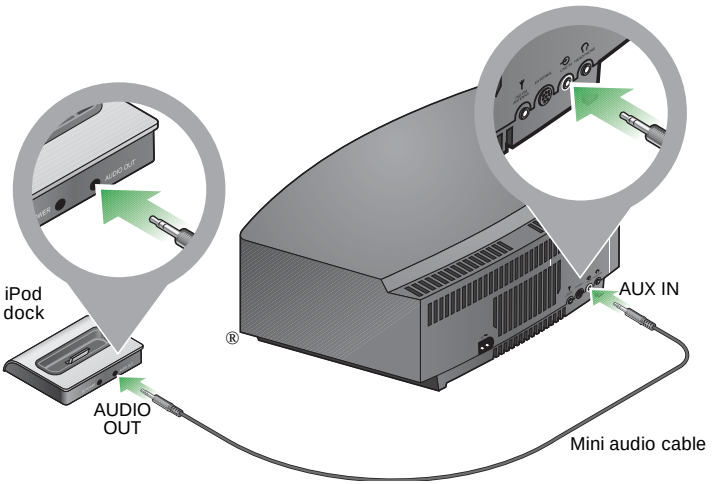

For a Wave® music system with Multi-CD Changer: Use the RCA audio cable and connect from AUDIO OUT on the dock to INPUT AUX 1 L and R. (See the note below.)

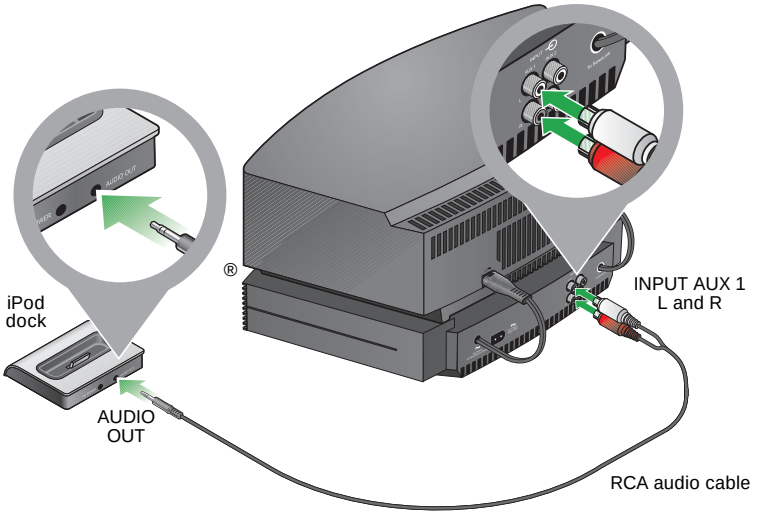

Connecting the dock to power

1. Connect the free end of the power pack cable to the dock.
2. Plug the power pack into an AC (mains) outlet.

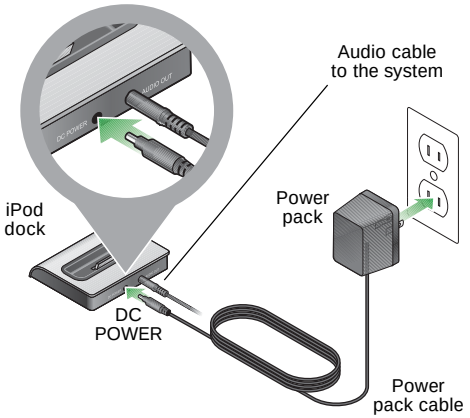

Control of your iPod and Bose® system

We recommend replacing the remote that came with your Wave® music system with this new remote (shown below). Then you can use the new remote exclusively (not the buttons on your Wave® system), to keep your iPod and system performing together as intended.

Note: *The remote that came with your Wave® system can also be used to control the iPod kit. Use the AUX button on the original remote instead of the iPod button on the new remote.*

Most of the remote control buttons are described in the owner's guide that came with your Bose system. The remote buttons below provide added features.

Important note: *The Sleep button and three Alarm buttons on the remote control affect system sound sources only. They do not control the iPod and cannot be set for use with that source.*

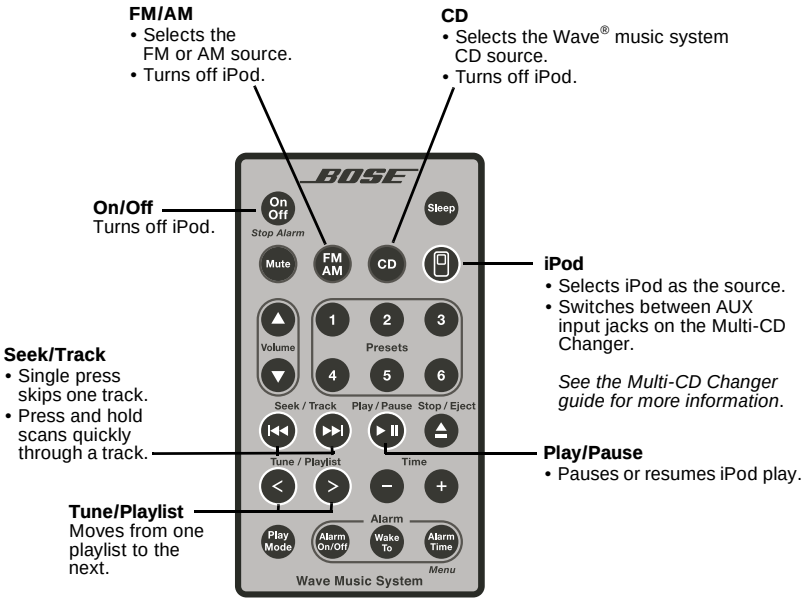

*The response to some remote commands depends on which source (FM/AM/CD/iPod/AUX) is playing. If the remote does not work as you expect, press the button for that source to reset the intended mode of operation.

Docking your iPod

Insert your iPod firmly into the dock and make sure it is securely seated in the dock adapter. Your iPod turns on in a paused state and begins charging, as needed. Even if the paused iPod turns off automatically, it continues to charge.

If you prefer, you can replace this dock adapter with the adapter specifically designed for and provided with your iPod. Use a fingernail or a slender tool carefully to pry the adapter free, as shown.

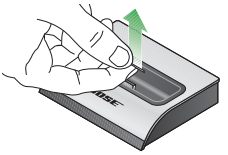

Playing your iPod

Be sure to aim the remote so its signals reach the IR sensor on the front of the dock. Then use these buttons as follows:

	• Press **iPod** to turn on your system and begin iPod playback.
Play / Pause	• Press **Play/Pause** to pause or resume iPod play.
Tune / Playlist	• Press **Tune/Playlist** to move from one playlist to another. • Press **Play** to hear that list play.
Seek / Track	• Press **Seek/Track** once to skip back or ahead one track. • Press and hold **Seek/Track** to scan through a track.
	• Press **Volume** to adjust the sound volume. Your Wave® system is designed to work with an iPod set at full volume. Volume adjustments can be made using the new remote, instead of using the iPod control. ***Note:*** *Volume changes using the iPod controls will not affect the Wave system® volume.*
	• Press **On/Off** once to turn off both products, aiming the remote at the dock until the iPod turns off.
	• Press any source button (**FM/AM** or **CD**) to turn off the iPod and listen to that source.

Important note: *Having your iPod turned off helps prevent interference when you switch to an FM or AM station.*

Troubleshooting

Problem	***What to do***
The remote does not control the iPod.	Press **iPod** to reset the mode of operation for the iPod. You may then need to press **Play/Pause** to resume play.
The iPod is on when it should not be.	If the system is off or you are playing another source, press **iPod**. Then press **On/Off** or another source button (**FM/AM** or **CD**). With the remote aimed properly, your iPod should turn off within 2 seconds.
The volume varies when the iPod plays different songs.	Use the new remote **Volume** to set the volume to the level you prefer for a particular song. *The recording quality of songs varies, producing inconsistent play volumes.*
The iPod is connected to the Multi-CD Changer and it is on but does not play.	Be sure the audio cable from the dock is connected to INPUT AUX 1 on the changer. Press **iPod** and check to see that AUX 1 appears on the Bose® system display. You may then need to press **Play/Pause**.
The Bose® system speakers play even when headphones are plugged into the docked iPod.	Connect the headphones to the mini jack on the Wave® system. *This silences the system so the sound plays through the headphones only.*



If your iPod has four buttons above the touch wheel, it is not compatible with this Wave® connect kit.

Battery replacement

To replace the remote control battery, use a Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032, 3-volt lithium battery. Be sure to match the + polarity on the battery to the + symbol inside the battery tray. Refer to your Bose® system owner's guide for further information.

Limited warranty

For Bose product limited warranty information, please refer to the owner's guide for the Wave® music system or Wave radio II.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. The distinctive design of the Wave® music system and Wave® radio II is a registered trademark of Bose Corporation in the U.S. and other countries. All other marks are registered trademarks and trademarks of Bose Corporation.

BOSE CORPORATION

USA Customer Support

Bose Corporation, The Mountain
Framingham, MA 01701-9168
1-800-367-4008

Canada Customer Support

Bose Ltd., 1-35 East Beaver Creek Rd.
Richmond Hill, Ontario L4B 1B3
1-800-465-2673

European Office

Bose Products B.V., Nijverheidstraat 8
1135 GE Edam, Nederland
TEL 0299-390111
FAX 0299-390114

Australia

Bose Pty Limited,
Unit 3, 2 Holker Street
Newington NSW, 2127
TEL +61 (0)2 8737 9999
FAX +61 (0)2 8737 9924

Deutschland

Postfach 1468
48504 Nordhorn
TEL 05921 3030 123
FAX 05921-724250

Bose AG
Hauptstraße 134
CH-4450 Sissach
TEL 061 975 77 33
FAX 061 975 77 44

Bose Ges.m.b.H
Wienerbergstraße 7
A-1100 Wien
TEL 01 604 043 40
FAX 01 604 043 423

United Kingdom Customer Support

Freepost EX 151
Exeter EX1 1ZY
TEL 0800 614 293
FAX 0870 240 2013

France

Bose S.A.S
12 rue de Témara
F-78100 ST. GERMAIN-EN-LAYE
France
TEL 0820 820 995
FAX 01 30 61 63 88

Poland

Bose Sp. z o.o.
ul. Woloska 12
02-675 Warszawa, Poland
TEL (48-22) 852-2928
FAX (48-22) 852-2927

Nederland

Bose B.V., Nijverheidstraat 8
1135 GE Edam, Nederland
TEL 0299-390111
FAX 0299-390114

Bose China

Bose Electronics (Shanghai Co., Ltd.)
2203-2205 22F, West Gate Tower
1038 West Nanjing Road
MeiLongzhen Plaza
Shanghai 200041,
Peoples Republic of China
TEL 86 21 62713800

Bose Hong Kong

Bose Limited
Suite 2410-11 Shell Tower
Times Square
1 Matheson Street
Causeway Bay, Hong Kong
TEL 852 2110 3330

Bose Taiwan

Worldwide House
Room 905, Floor 9
131 Min Sheng East Road
Section 3
Taipei, Taiwan
TEL 886 2 2514 7676

Bose India

Bose Corporation India Private Limited
4th Floor, Shriram Bhartiya Kala Kendra
1 Copernicus Marg
New Delhi 110 001, India
TEL 91 11 2307 3825 / 26 /27
India Toll Free: 1600 11 2673
Website: www.boseindia.com

Atlas Hi-Fi Pte. Ltd.

68 Orchard Road
#03-19/21 Plaza Singapura
Singapore 238839
Republic of Singapore
TEL 65-6-339-0966

The Asavasopon Co. Ltd.

50-52 Siphya Road
Mahaprudtharam, Bangrak
Bangkok 10500
Thailand
TEL 66-2-234-6467

PT Audio Pratama

JL. Lodan Raya No. 1
Block CO/CN
Jakarta 14430
Indonesia
TEL 62-21-659-8719

CSI Corporation

Seki Building
23, 2-Ga Namsan-Dong
Joong-Gu
Seoul 100-042
South Korea
TEL 82-2-344-635-114

Eleksis Marketing Corporation

269 Connecticut Street
Greenhills East
Mandaluyong City
Metro Manila 1550
Philippines
TEL 63-2-724-9566

G&M International LLC

P.O. Box 1229
Dubai, United Arab Emirates
TEL 971-4-2669-000

Sound Imports

Shop 40
The Mall of Rosebank
Cradock Avenue
Rosebank 2196
South Africa
TEL 27-11-880-1933

World Wide Web

www.Bose.com

BOSE®
Better sound through research®

2008 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM316766 Rev 01